


**MUTOH**

# XPJ-C641SR-P

## Startup Guide


### Unpacking and Assembling Instructions

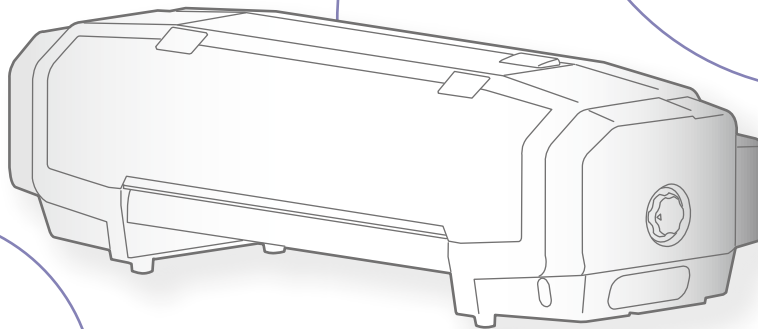

## Important Notice

---

### For Users in Europe

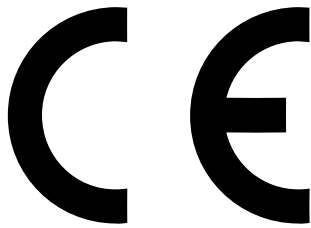

The CE marking is a mandatory European marking for certain product groups to indicate conformity with the essential health and safety requirements set out in European Directives.

By affixing the CE marking, the manufacturer, his authorized representative, or the person placing the product on the market or putting it into service ensures that the item meets all the essential requirements of all applicable EU directives and that the applicable conformity assessment procedures have been applied.

### For Users in the United States

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in radiation exposure.

---

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

VerteLith™ is trademark of MUTOH INDUSTRIES LTD.

Company names and product names that appear in this Guide are registered trademarks or trademarks of the respective companies.

---

- Unauthorized copying or duplication of the whole or part of the contents of this Guide is prohibited.
- Every care has been taken in writing the contents of this Guide, but please contact MUTOH or the dealer you purchased the product from if you find any unclear, erroneous or otherwise unsatisfactory content in the Guide.
- Please be aware that MUTOH will not be liable in any way for failures or accidents that result from handling or operating the printer according to any procedures other than those set forth in this Guide.

## Safety Precautions

5

|                                                    |    |
|----------------------------------------------------|----|
| Safety Symbols.....                                | 5  |
| Electrical shock/ short circuit/ fire hazards..... | 6  |
| Installation.....                                  | 7  |
| Handling .....                                     | 8  |
| Ink and waste fluid.....                           | 9  |
| Warning labels.....                                | 10 |
| Instruction Labels .....                           | 11 |

## Check before installation

12

|                                          |    |
|------------------------------------------|----|
| Installation Location Requirements ..... | 12 |
| Minimum Space Requirements .....         | 12 |
| Power Specification .....                | 13 |
| Environmental Requirements.....          | 13 |

## Unpacking

14

|                                    |    |
|------------------------------------|----|
| Preparations .....                 | 14 |
| Unpacking the machine.....         | 15 |
| Unpacking the optional stand ..... | 17 |

## Assembling

18

|                                                       |    |
|-------------------------------------------------------|----|
| Assembling the main unit and the optional stand ..... | 18 |
| Removing protective materials .....                   | 22 |

---

## Preparations

24

|                                                    |    |
|----------------------------------------------------|----|
| Connecting the power cord and Ethernet cable ..... | 24 |
| Turning on the print and cut machine .....         | 27 |
| Downloading software .....                         | 28 |

---

## Setup

30

|                                                        |    |
|--------------------------------------------------------|----|
| Setup Flow .....                                       | 30 |
| Configure initial setup of VerteLith and machine ..... | 31 |

# Safety Precautions

## Safety Symbols

■ The following classifications indicate hazards or damage that could result from ignoring instructions or incorrect handling.

|                                                                                                  |                                                                                                                |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  <b>Warning</b> | Failure to follow the instructions could result in serious injury or death.                                    |
|  <b>Caution</b> | Failure to follow the instructions could result in minor injury or damage to the whole or part of the product. |

■ The following symbols indicate precautions that must be followed.

|                                                                                   |                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------|
|  | An action that must be avoided.                 |
|  | An important instruction that must be followed. |

■ Other symbols

|                                                                                                        |                                                                            |
|--------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
|  <b>Important !</b> | Provides information that require special attention or should be followed. |
|  <b>Note</b>        | Provides supplemental or reference information.                            |
|                     | Indicates the link to the reference section.                               |

### Note

For the name of each part marked with warning or caution symbols, see “Before Use” on the XPJ-C641SR-P operation manual.

Check before  
installation

Unpacking

Assembling

Preparations

Setup

## Electrical shock/ short circuit/ fire hazards

### Warning

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                     |                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Do not install this product in a location with high humidity and dust.</b><br>This could result in an electrical shock or fire.                                                                                                                                                                                                                                                                                            |    | <b>Make sure to use a designated power socket.</b><br>Failure to do so could result in an electrical shock or fire.                                                                                                                                                                                         |
|    | <b>Do not use a damaged power cord.</b><br>This could result in an electrical shock or fire.                                                                                                                                                                                                                                                                                                                                  |    | <b>Plug the power cord into the wall outlet.</b><br>Do not use power strips. This could generate heat, resulting in fire.                                                                                                                                                                                   |
|    | <b>Do not connect or disconnect the power plug with wet hands.</b><br>This could result in an electrical shock.                                                                                                                                                                                                                                                                                                               |    | <b>Plug the power cords into the wall outlet that has the earth connection and make sure to connect the earth.</b><br>If the earth is not connected, an electrical shock or fire may occur.                                                                                                                 |
|    | <b>Do not connect an earth wire to the following places:</b><br><ul style="list-style-type: none"> <li>• <b>Gas pipe</b><br/>It has potential risks of fire or explosion.</li> <li>• <b>Earth wire of telephone cables or lighting rods</b><br/>Large current may flow when the lightning strikes.</li> <li>• <b>Water pipe or faucet</b><br/>It may not work properly if a plastic pipe is connected to the pipe.</li> </ul> |    | <b>Make sure to connect an earth wire to the earth connection that meets the following requirements:</b><br><ul style="list-style-type: none"> <li>• <b>Earth terminal of power socket.</b></li> <li>• <b>An earth wire with a copper plate which is buried at 650 mm or more in the ground.</b></li> </ul> |
|  | <b>Do not insert or drop metal or flammable objects into the printer through openings such as vent.</b><br>This could result in an electrical shock or fire.                                                                                                                                                                                                                                                                  |  | <b>Be sure to use the designated power cords.</b><br><ul style="list-style-type: none"> <li>• Failure to do so could result in an electrical shock or fire. For the designated power cord, please contact your local MUTOH dealer.</li> </ul>                                                               |
|  | <b>Do not block the vent on the product with cloth or other materials.</b><br>If covered, the inside the product gets hot, resulting in fire.                                                                                                                                                                                                                                                                                 |                                                                                     | <ul style="list-style-type: none"> <li>• The power cord should have the protective ground terminal and make sure to plug in securely.</li> </ul>                                                                                                                                                            |
|  | <b>Never open the covers securing with screws.</b><br>This could result in an electrical shock or damage to the printer.                                                                                                                                                                                                                                                                                                      |                                                                                     | <ul style="list-style-type: none"> <li>• Use the power cords which meet the safety standard, voltage and plug shape of the country to use this product.</li> </ul>                                                                                                                                          |
|  | <b>Ensure that no moisture enters the product.</b><br>This could result in an electrical short circuit.                                                                                                                                                                                                                                                                                                                       |  | <b>Make sure to follow the instructions on this guide to connect the power cord or cables.</b><br>Failure to do so could result in fire.                                                                                                                                                                    |
|  | <b>If foreign objects or liquid accidentally entered the inside of the printer, do not use it.</b><br>This could result in an electrical shock or fire. Immediately power off the printer and disconnect the power plug from the outlet. Then contact the MUTOH customer support.                                                                                                                                             |                                                                                     |                                                                                                                                                                                                                                                                                                             |

|                                                                                   |                                                                                                                                                                                                                                                                                                                           |                                                                                   |                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Follow the precautions below when handling the power cord.</p> <ul style="list-style-type: none"> <li>• Do not modify power cords.</li> <li>• Do not place heavy objects on power cords.</li> <li>• Do not bend, twist, or pull on power cords.</li> <li>• Do not route power cords near heating equipment.</li> </ul> |  | <p>Follow the precautions below when handling the power plug.</p> <ul style="list-style-type: none"> <li>• Do not allow dust or foreign objects to accumulate around the power plug.</li> <li>• Firmly insert the power plug into the wall outlet.</li> </ul> <p>Incorrect handling could result in fire.</p> |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## Installation

### Warning

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                    |                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>Choose the location which satisfies the requirements below:</p> <ul style="list-style-type: none"> <li>• The floor must be level.</li> <li>• Avoid vibration from the neighboring devices.</li> <li>• Low humidity and free from dust.</li> <li>• Less chance of temperature and humidity changes.</li> <li>• Avoid direct sunlight.</li> <li>• Avoid water.</li> <li>• Avoid direct air onto the printer.</li> <li>• Low levels of electromagnetic waves.</li> </ul> |   | <p>Install the product in a location where ventilation can be carried out.</p> <p><b>Keep the work area well-ventilated.</b></p> <p>Odor of the ink could have adversely impact on health.</p> <p>If you experience headache, fatigue or dizziness, stop your work and immediately get to fresh air.</p> <p>If nausea persists, seek medical advice.</p> |
|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |  | <p><b>This equipment is not suitable for use in locations where children are likely to be present.</b></p>                                                                                                                                                                                                                                               |
|  | <p>Before taking out the product from the packaging box, make sure to remove the plastic sheet wrapped around the product first.</p> <p>Failure to do so could cause slip or damage to the product.</p>                                                                                                                                                                                                                                                                  |                                                                                    |                                                                                                                                                                                                                                                                                                                                                          |

### Caution

|                                                                                     |                                                                                                       |                                                                                     |                                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>At least two people are required for moving this product. When moving, keep the product level.</p> |  | <p><b>Do not tilt the product.</b></p> <p>The ink inside the product may spill. MUTOH cannot guarantee that the printer can run properly.</p> |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|

Check before  
installation

Unpacking

Assembling

Preparations

Setup

## Handling



### Warning

|  |                                                                                                                           |
|--|---------------------------------------------------------------------------------------------------------------------------|
|  | <b>Do not sit on or place heavy objects on the product.</b><br>Failure to do so could result in injury from a fall.       |
|  | <b>Do not touch the moving parts.</b><br>This could cause injury or damage to the product.                                |
|  | <b>In case you need to move the product after ink was filled, move it slowly to avoid impact and risk of ink leakage.</b> |



### Caution

|  |                                                                                                                                                                                                                                                                                                        |  |                                                                                                                                                                                        |
|--|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Never touch the print head nozzles when cleaning the parts around the print head.</b><br>This could damage the print head.                                                                                                                                                                          |  | <b>Do not touch the cleaning wiper and the print head cap unit with bare hands when cleaning the wiper.</b><br>If finger oil gets on this, head cleaning cannot be performed properly. |
|  | <b>Do not use the media fixing handle while in printer initialization or printing.</b><br>The print head can interfere with the pressure rollers and cause damage.                                                                                                                                     |  | <b>Do not touch the media feed slot, platen and media guide while the heater is in operation.</b><br>These parts get hot and could cause burn injury.                                  |
|  | <b>Do not use volatile chemicals such as thinner, benzine or alcohol for cleaning.</b><br>This will damage the paint on the printer.                                                                                                                                                                   |  | <b>Do not touch the media guide while printing.</b><br>The media guide becomes hot and you could get burn injuries.                                                                    |
|  | <b>Do not push the tab on the cutter holder too hard or release suddenly.</b><br>There is a spring under the cutter so that the cutter may jump out from the holder.                                                                                                                                   |  | <b>Do not touch the blade edge.</b><br>This will cause injury.                                                                                                                         |
|  | <b>Do not attempt the following actions during ink charging:</b> <ul style="list-style-type: none"> <li>• Power off the printer.</li> <li>• Disconnect the power cord.</li> <li>• Open the front cover or the maintenance cover.</li> <li>• Put the media fixing handle in unlock position.</li> </ul> |  | <b>Immediately after printing, the media guide gets hot. Allow it to cool down enough to do the work.</b>                                                                              |
|  | <b>Before moving this printer, always empty the waste ink tank even moving short distance.</b><br>Failure to do so may result in damage to the product.                                                                                                                                                |  |                                                                                                                                                                                        |

## Ink and waste fluid



### Warning

|  |                                                                                                                                                                                                                                                      |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Make sure to read the Safety Data Sheet (SDS) before using ink cartridges for the first time.                                                                                                                                                        |
|  | Store ink cartridges and waste fluids in a cool, dark place and avoid direct sunlight. Keep away from <ul style="list-style-type: none"> <li>• children's reach</li> <li>• fire and heat</li> </ul>                                                  |
|  | When disposing of ink, waste fluid collected from the printer, or containers and paper towels with ink adhered, be sure to follow the instructions of industrial waste disposal contractors, related laws, and local regulations to dispose of them. |




### Caution

|  |                                                                                                                                                                                                                                                                                                                                                                                                 |  |                                                                                                                                                                                                                             |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Follow these precautions when handling ink cartridge: <ul style="list-style-type: none"> <li>• Do not disassemble</li> <li>• Do not drop or hit</li> </ul> This could lead to ink leakage.                                                                                                                                                                                                      |  | Use MUTOH genuine ink.<br>This printer is designed to deliver best performance by using MUTOH genuine ink. The use of non-genuine ink may affect the printer as well as print quality. This is not covered by the warranty. |
|  | Use inks within its shelf life. <ul style="list-style-type: none"> <li>• Using an expired ink could result in damage to the printer.</li> <li>• When expired, replace with a new one even if ink remains in the ink bag.</li> <li>• Dispose of expired ink as industrial waste. Put the emptied ink cartridge in a plastic bag and dispose of it according to the local regulations.</li> </ul> |  |                                                                                                                                                                                                                             |
|  | When handling ink cartridges, avoid skin or eye contact with ink. If in eyes or on skin, immediately flush with running water.<br>If left untreated, it could cause bloodshot eyes or mild inflammation.<br>If there is any abnormality, seek medical advice immediately.                                                                                                                       |  |                                                                                                                                                                                                                             |

## Warning labels

Warning labels are affixed to the hazardous area of the product. Read and follow the instructions on the labels.


In case the warning labels came off or get dirty, please contact your local MUTOH dealer for replacement.

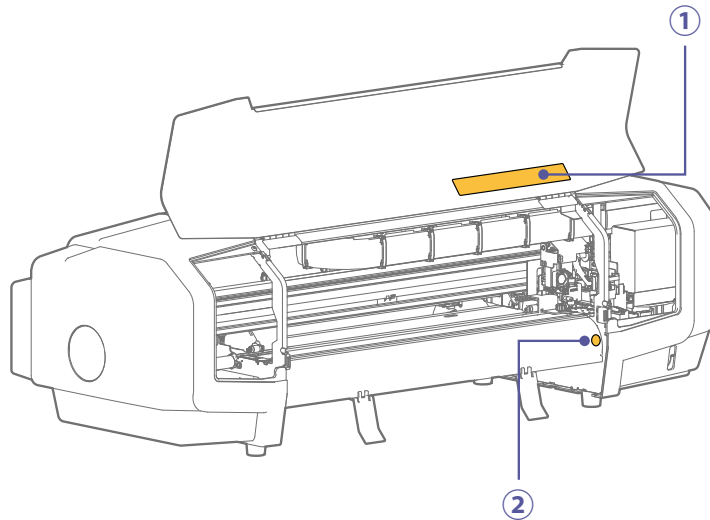


| Type of labels | Name / Meaning                                                                                                                                                                       |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>①</p>       | <p><b>Cut Hazard Label for Cutter</b></p> <ul style="list-style-type: none"> <li>Do not insert your fingers around the cutter. The cutting blade may injure your fingers.</li> </ul> |
| <p>②</p>       | <p><b>Do Not Put Hand Label</b></p> <ul style="list-style-type: none"> <li>Contacting with carriage could cause injuries.</li> </ul>                                                 |

## Instruction Labels

Instruction labels are affixed where special attention for operating this product is required. The contents of each label are shown here.

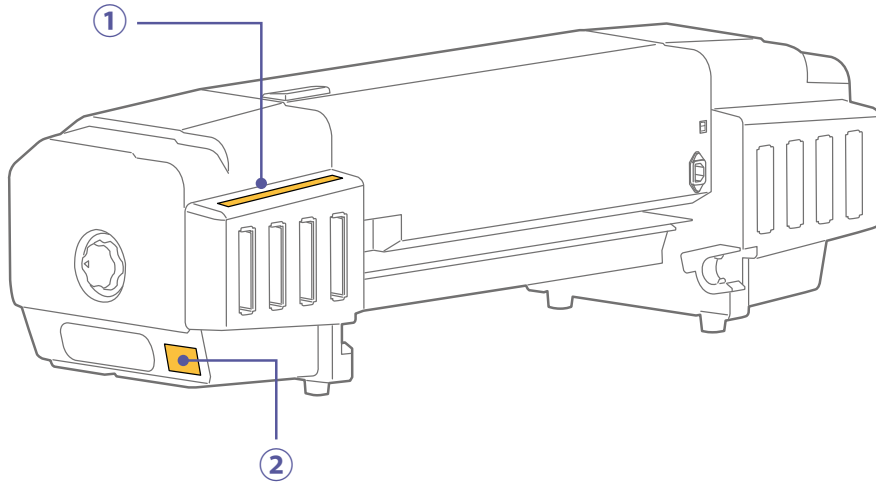

| Type of labels                                                                                                                                                                                                                                                                                                                    | Name / Meaning                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <b>①</b>                                                                                                                                                                                                                                       | <b>Ink Color Label</b> <ul style="list-style-type: none"> <li>Insert the correct color of ink cartridge according to this label.</li> </ul> |
| <b>②</b> <div data-bbox="437 1133 732 1330" style="border: 1px solid black; padding: 5px;"> <p>◆When moving this product, always empty the waste ink tank.<br/>If ink splashes inside the waste ink tank while being moved, it can cause damage.</p> <p>◆本製品を移動するときは、廃液タンクを空にして下さい。<br/>移動時に廃液タンク内でインクがはねると故障の原因となります。</p> </div> | <b>Moving Instruction Label</b>                                                                                                             |

Check before  
installation

Unpacking

Assembling

Preparations

Setup

# Check before installation

## Installation Location Requirements

Choose the location which satisfies the requirements below.

- The floor must be level
- Avoid vibration from the neighboring devices
- Low humidity and free from dust
- Less chance of temperature and humidity changes
- Avoid direct sunlight
- Avoid water
- Avoid direct air onto the product (including air from air conditioner)
- Low levels of electromagnetic waves




### Caution

- This product is not suitable for use in location where children are likely to be present. Keep the work area well-ventilated. Odor of ink may adversely impact on health. If you experience headache, fatigue or dizziness, stop your work and immediately get to fresh air. If nausea persists, seek medical advice.

## Minimum Space Requirements

The following space is required for installation.

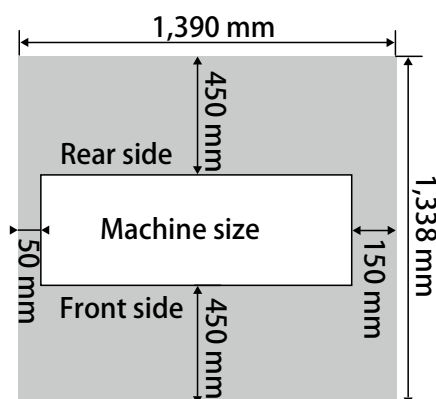

### Machine size

Width x Depth: 1,190 mm x 438 mm

Height (with cover opened):

573 mm

with stand attached 1,373 mm

## Power Specification

The installation site must meet the following power specification:

- Input voltage :  
AC 100V to 120V  $\pm$  10%  
AC 200V to 240V  $\pm$  10%
- Input frequency :  
50/60 Hz  $\pm$  1Hz
- Input load current :  
6.5 A or more

## Environmental Requirements

The installation site must meet the following environmental requirements:

- Operating condition:  
Temperature: 20° C to 32° C  
Humidity: 40% to 60%, non condensing
- Printing Condition:  
Temperature: 22° C to 30° C  
Humidity: 40% to 60%, non condensing
- Machine Storage Condition:  
Without ink filled : Within 6 months : Temperature: -20° C to 60° C  
Humidity: 20% to 80% (non condensing)  
With ink filled : Within 1 week (\*)  
\*Storage must be within 4 days when stored at 32° C or over  
Temperature: -10° C to 40° C  
Humidity: 20% to 80% (non condensing)

Check before  
installation

Unpacking

Assembling

Preparations

Setup

# Unpacking


## Preparations

Please check the points below before unpacking.


- At least two people are required for unpacking, assembling and installing this product.
- You will need the following items other than the supplied items for installation.




Computer : 1

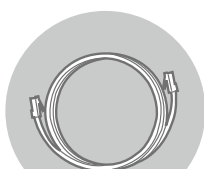


Ethernet cable : 2

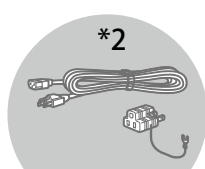


Power cord : 1

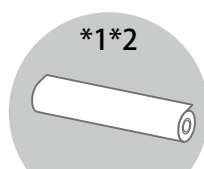

Media : 1

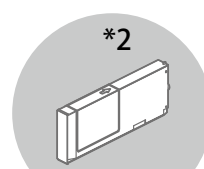


Cleaning cartridge : 4

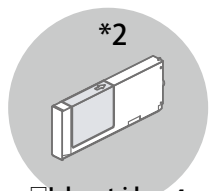


Ink cartridge : 4


Or

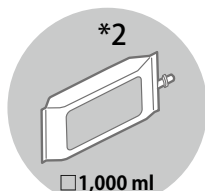

1,000 ml  
Ink bag : 4

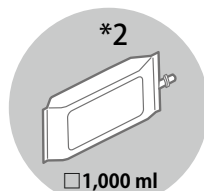

1,000 ml  
Cleaning bag : 4

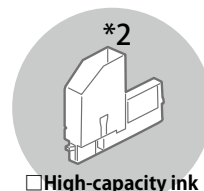

High-capacity ink  
pack adapter : 4

### \*1 Usable size of media

- 2-inch or 3-inch paper core
- Outer diameter: Up to 150 mm
- Media width: 198 mm to 630 mm
- Weight: Up to 9 kg

### \*2 Optional accessories or consumable supplies



### Warning

Make sure to use the designated power cord.  
Failure to do so could cause electric shock or fire.

### Important !

Make sure your computer meets the following requirements:

- OS: Windows 11, Windows 10
- CPU: Intel (R) Core (TM) i5 or more
- Memory: 16 GB minimum
- Network: Ethernet network port

### Note

- The OS support period of software supplied from MUTOH conforms to the Microsoft support lifecycle policies.
- Please also check the system requirements of your RIP software.

## Unpacking the machine




### Caution

- At least two people are required for unpacking and moving this machine.
- When taking out the machine from the packaging box, remove the plastic sheet wrapped around the machine, then take it out. Failure to do so may cause slip and damage to the machine.
- Keep the machine level while moving.


Follow these steps to unpack this product.

- 1 Open the packaging box and take out each part.

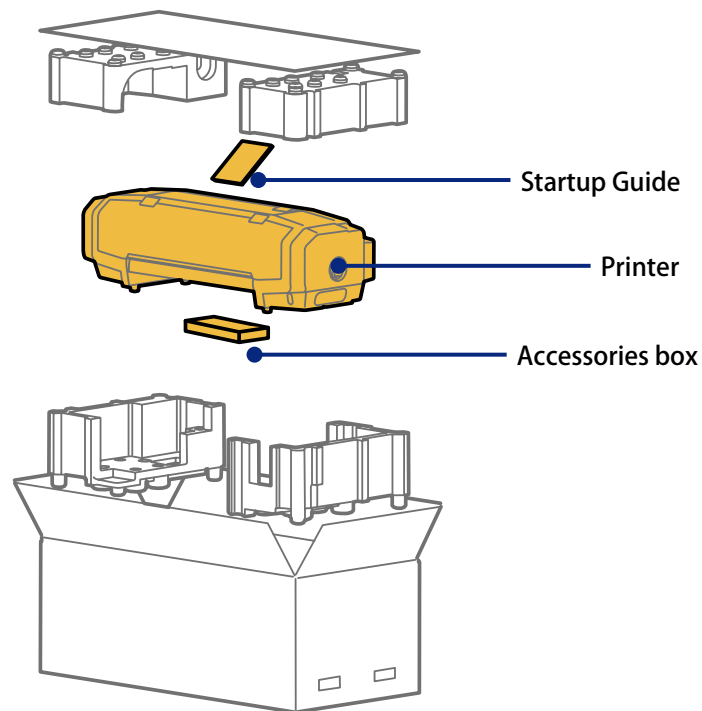


### Note

When moving this product, hold the following parts of the product.

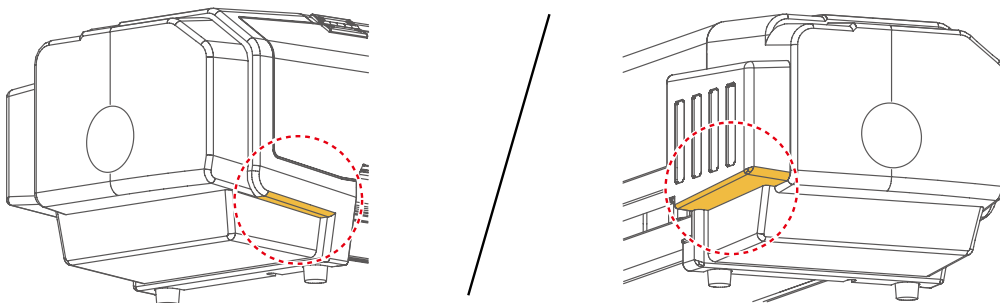

## 2 Check that the following items are included.

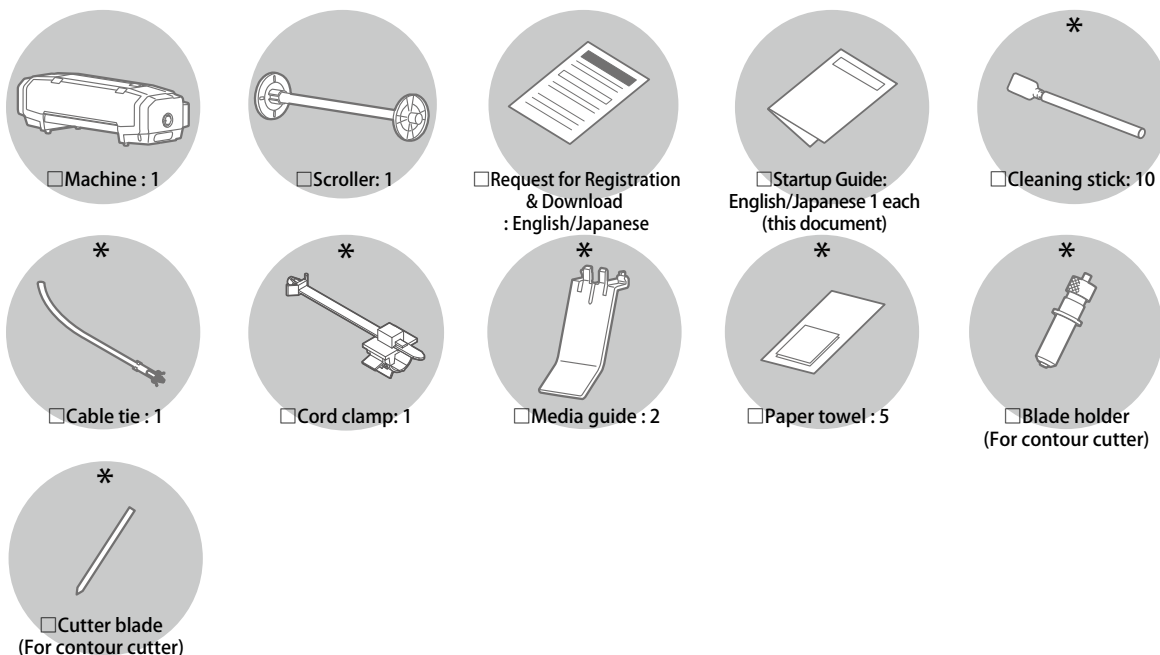


### Important !

- The items with asterisk mark in the above illustration are included in the accessories box.
- A cutter blade is installed in the blade holder.


## Unpacking the optional stand

**1** Open the packaging box and take out each part.


**2** Check that the following items are included.

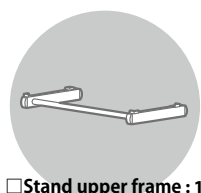

□ Stand upper frame : 1

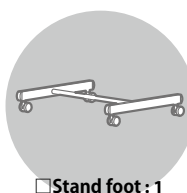

□ Stand foot : 1

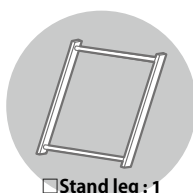

□ Stand leg : 1



□ Socket head cap screw : 4




□ Hex wrench : 1




□ Wing bolt : 2

※ For the stand with reinforcement, the following items are also included.

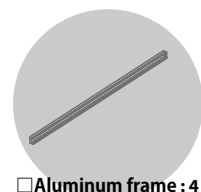

□ Aluminum frame : 4

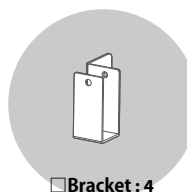


□ Bracket : 4



□ Socket head cap screw  
(M5×10) : 8



□ Socket head cap screw  
(M5×40) : 4

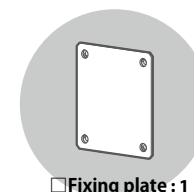

□ Fixing plate : 1

Check before  
installation

Unpacking

Assembling

Preparations

Setup


# Assembling

## Assembling the main unit and the optional stand

### 1. Attaching media guides and cable ties

Follow these steps to attach the media guides and the cable ties.


- 1 Attach the media guides.

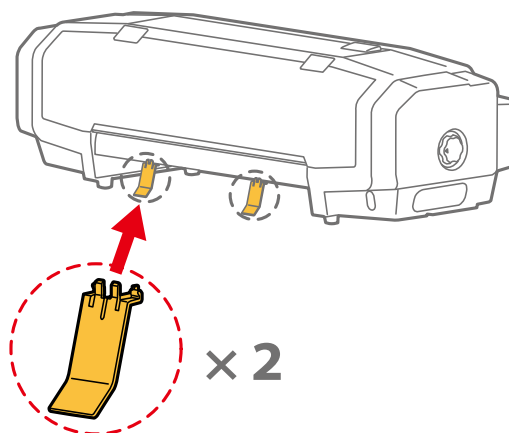


- 2 Attach the supplied cable ties to the position shown in the illustration on the rear side of the machine.

#### Note

- These ties are used for securing the cables so that they do not interfere with a roll media.
- Cable ties can be loosen or unbound by pushing the nail near the insertion hole.

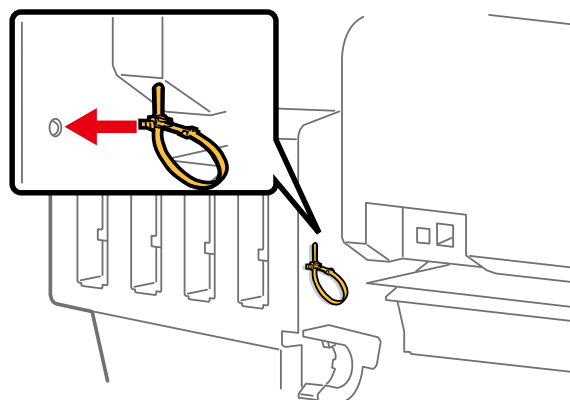

- 3 Attach the supplied cord clamp to the position shown in the illustration on the rear side of the machine.

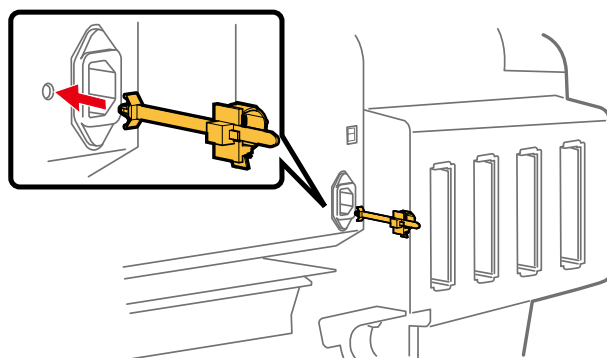

## 2. Assembling the optional stand




### Caution


At least two people are required for mounting the machine on the stand.

Follow these steps.

#### 1 Assemble the stand.

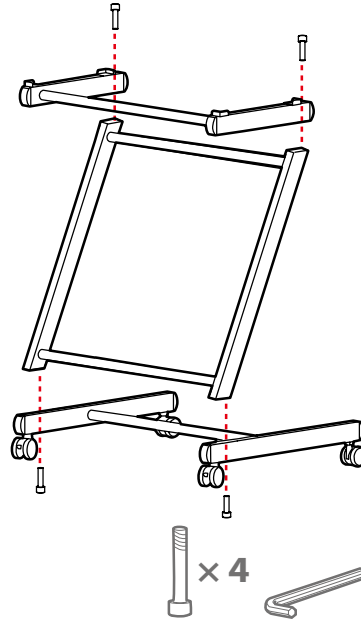

#### 2 Lock the casters.

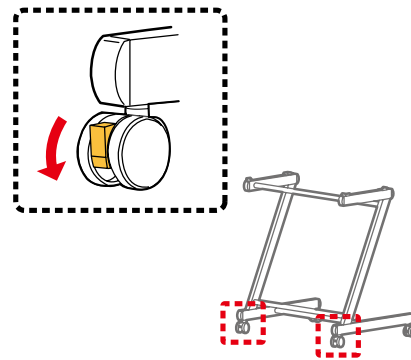


#### 3

- Adjust the position of the rubber feet and place the machine on the stand.
- Fasten with wing bolts.

#### Note

If your stand includes the reinforcement, move to the next step.

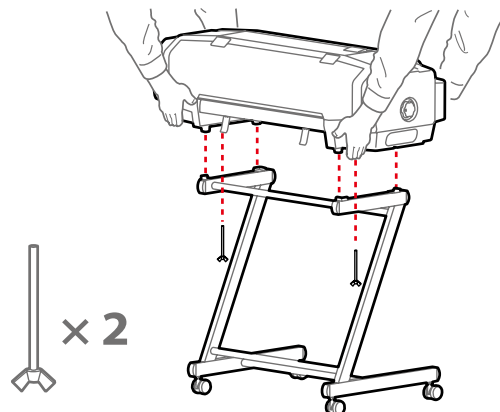

Check before  
installation

Unpacking

Assembling

Preparations


Setup

## Stand with reinforcement


Next follow these steps to assemble the stand.

- 1 Use the screws to temporarily attach the bracket to the stand frame.

- Screw (M5x40) × 4

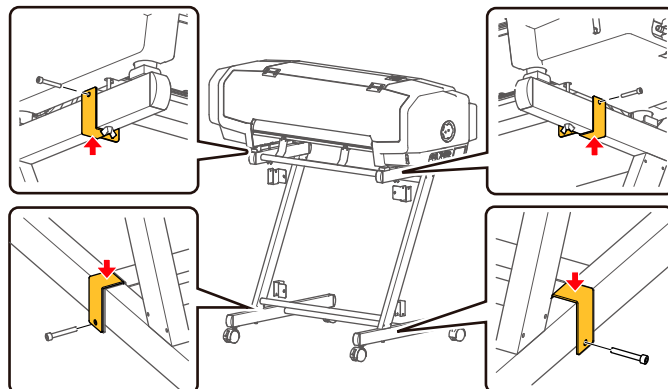


- 2 Move the bracket to the position shown in the illustration.

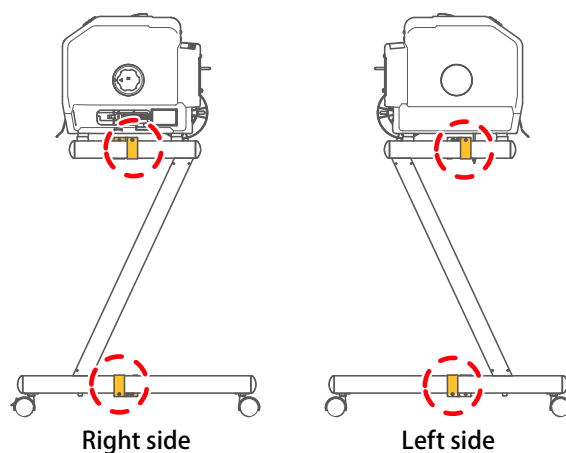

- 3 Use the screws to temporarily attach the aluminum frame to the bracket.

- Screw (M5x10) × 4

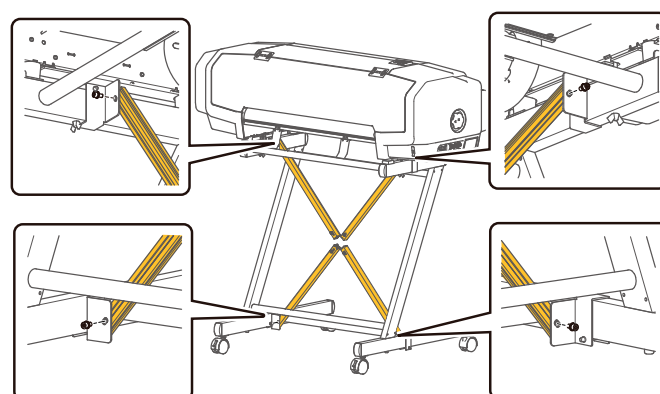


- 4 Use the screws to attach the fixing plate to the center of the four aluminum frames.

- Screw (M5x10) × 4

 **Note**

When attaching the fixing plate, the side with large chamfered corner should be upper side.

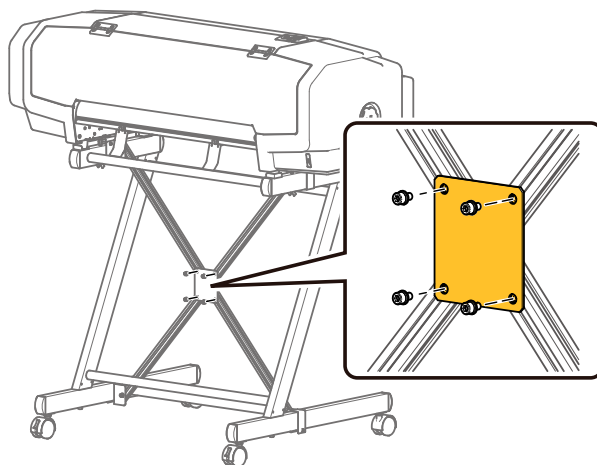

- 5 Tighten all the screws that were temporarily attached.

Check before  
installation

Unpacking

Assembling

Preparations


Setup

## Removing protective materials


Follow these steps.

- 1 Remove all the protective materials and tapes attached to the outer side of the machine.


- 2 Open the front cover.

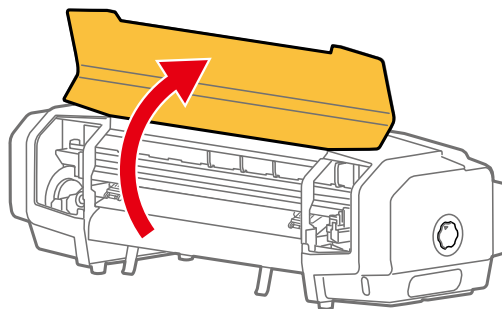


- 3 Remove the roller protection sheet.

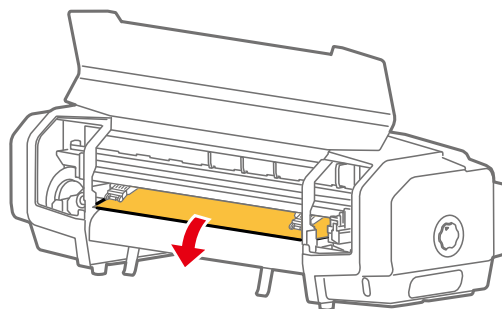


- 4 Remove the tape and remove the steel veyor protector.

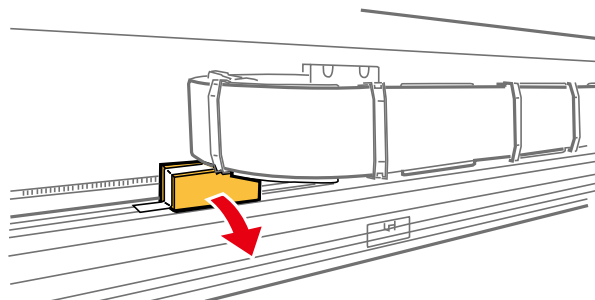


- 5 Remove the tape and move the edge holders to the left and right ends.

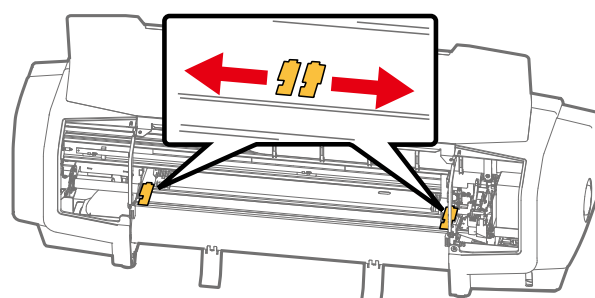


- 6 Remove the tape securing the sheet cutter.

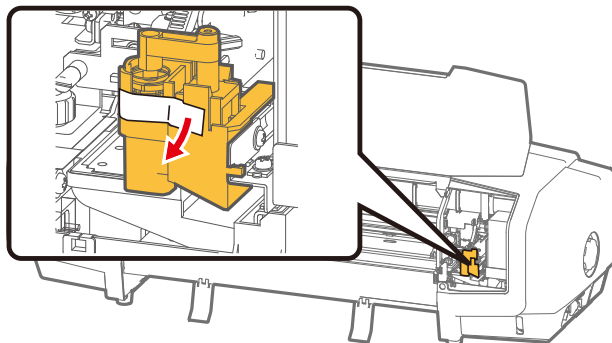

- 7 Remove the tape securing the contour cutter.

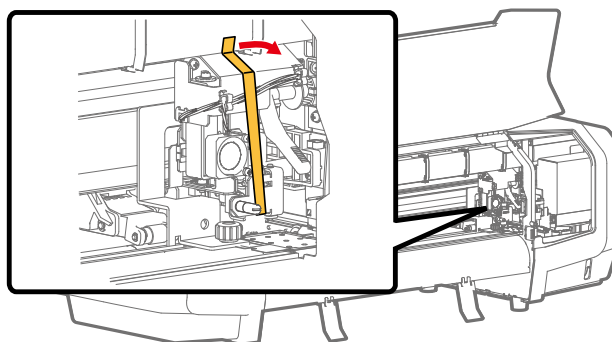

- 8
- Remove the screw and remove the carriage shipping bracket.
  - Close the front cover.

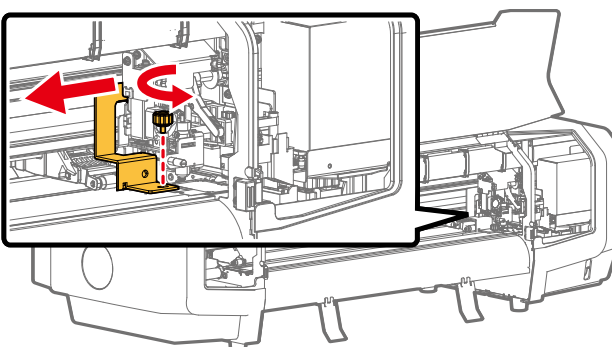

 **Important !**

Keep the following parts for reuse. You will need them when transporting this machine.

- Roller protection sheet, Steel veyor protector, Carriage shipping bracket and screw

Check before  
installation

Unpacking

Assembling

Preparations


Setup

# Preparations

## Connecting the power cord and Ethernet cable

### 1. Before connecting the cable

1. Turn the media fixing handle to lock it.  
Check that the knob of the drain tube valve is in the position shown in the illustration.

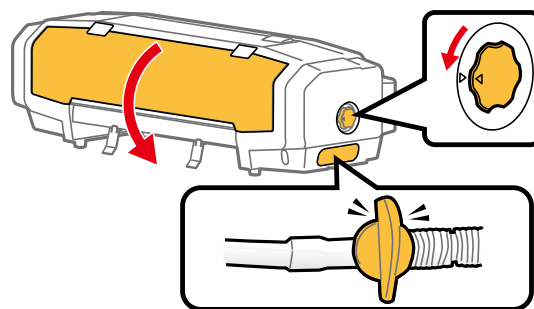


### 2. Connecting the power cord

- 1 Check that the power button is OFF.

#### Note

When it is ON, the power button is pressed in. Press the button again to turn it off.

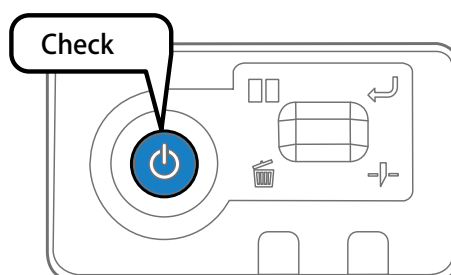


- 2 Set the voltage switch appropriately depending on the voltage of the country you are using this machine.

#### Note


Voltage switch

- 115V: AC100V - 120V region
- 230V: AC200V - 240V region

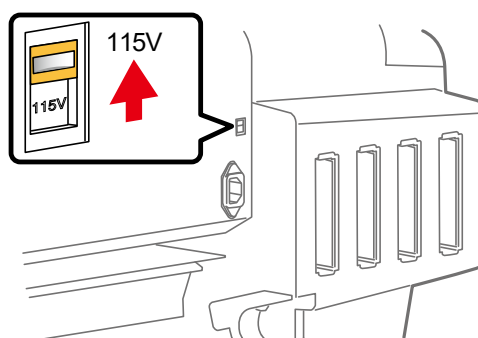


#### Note

- By factory default, the voltage switch is set to 230V.
- If the voltage switch does not match the local voltage, an error will occur. For errors, see "Troubleshooting" in the operation manual.

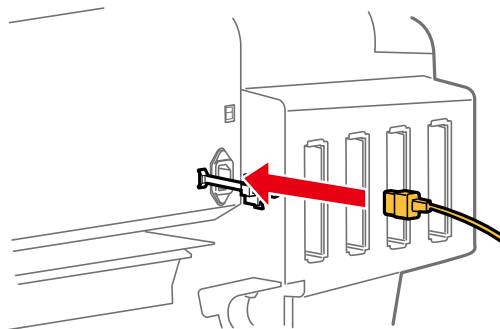
**3** Connect the power cord to the machine.**4** Secure the power cord to the cord clamp.

1. Pass the power cord through the clamp and push in to close the cord clamp until it clicks.
2. Slide the clamp to the inlet direction.

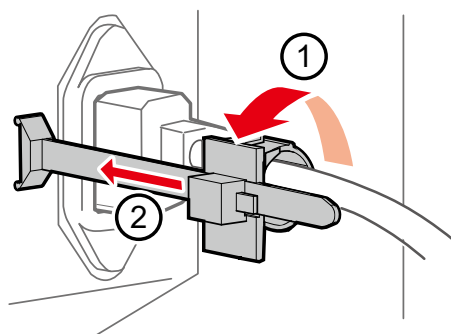**5** Plug the power cord correctly into the wall outlet.**Warning**

Do not use power strips.

3-pin plug

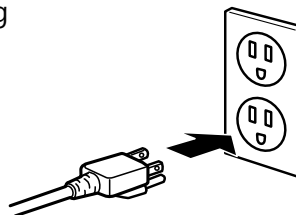

Check before  
installation

Unpacking


Assembling

Preparations


Setup

### 3. Connecting an Ethernet cable

- 1 Connect the Ethernet cable to this product.

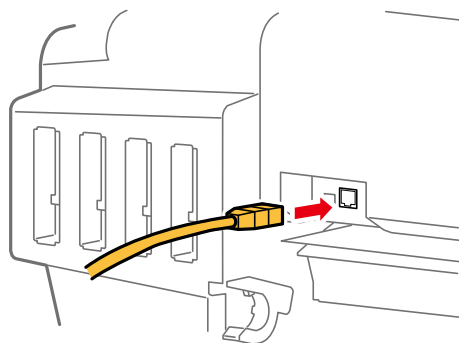


- 2 Secure the Ethernet cable with the cable tie.

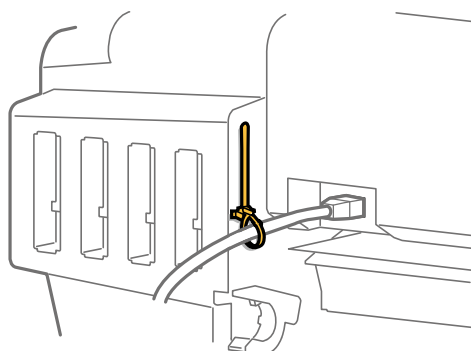

- 3 Connect the Ethernet cable to the LAN port of the networking device like hub or router.

#### Important !


This product should be used in a LAN environment with Internet access.

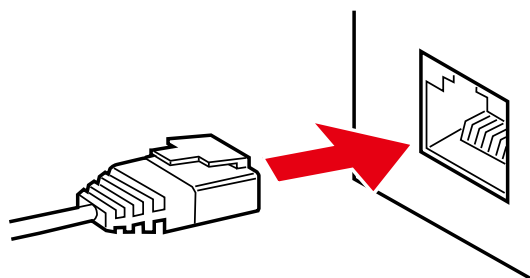

- 4 Use the other Ethernet cable to connect the computer to the networking device.

#### Important !

Make sure that your machine and your computer are on the same subnet.

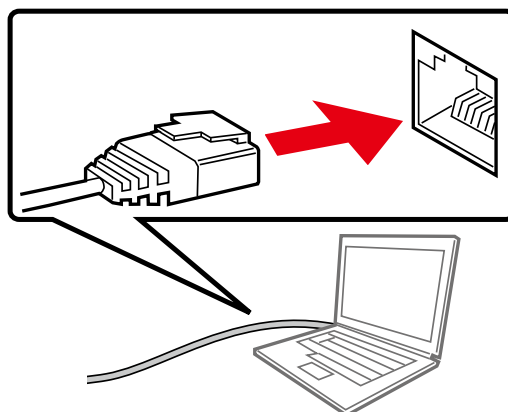

## Turning on the print and cut machine


### 1 Press the power button on this machine.

- The blue lamp on the panel will light up.
- Machine initialization begins.

#### Important !

Before turning on this machine, make sure that

- the media fixing handle is locked.
- the front cover is closed.

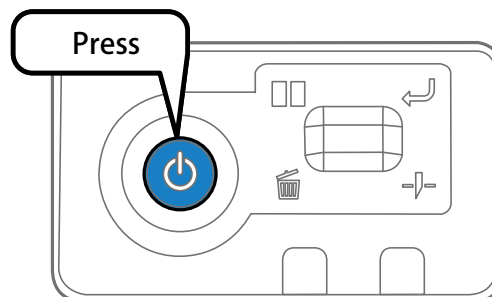

### 2 Turn on the computer.

Check before  
installation

Unpacking

Assembling

Preparations

Setup

## Downloading software

You will install the following software in the computer that connects to this machine.

The software and manuals can be downloaded from MUTOH Club.

|                      |                               |                                                                                                                                                                                                                                                                                                     |
|----------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All-in-one Installer | MUTOH Status Monitor (MSM)    | You can check the machine status information, change various settings and perform test printing.                                                                                                                                                                                                    |
|                      | Manual (Printer and software) | <p>The following manuals are included</p> <ul style="list-style-type: none"> <li>• XPJ-C641SR-P Operation Manual "Operations and Maintenance Methods"</li> <li>• XPJ-C641SR-P Startup Guide (this manual)</li> <li>• MUTOH Status Monitor User's Manual</li> <li>• VerteLith User Manual</li> </ul> |
| VerteLith            |                               | This genuine RIP software maximizes the performance of MUTOH printers and streamlines your workflow. (License purchase required)                                                                                                                                                                    |

MUTOH Status Monitor (MSM) must be installed before printing. Once installed, follow the MSM operation manual to do initial setup and machine registration.


👉 MUTOH Status Monitor OPERATION MANUAL 「Initial Setting」

### Important !

Make sure to use MSM downloaded from MUTOH Club.

**1** Access MUTOH Club (<https://mutoh-club.com/>).

**2** Click [Login].

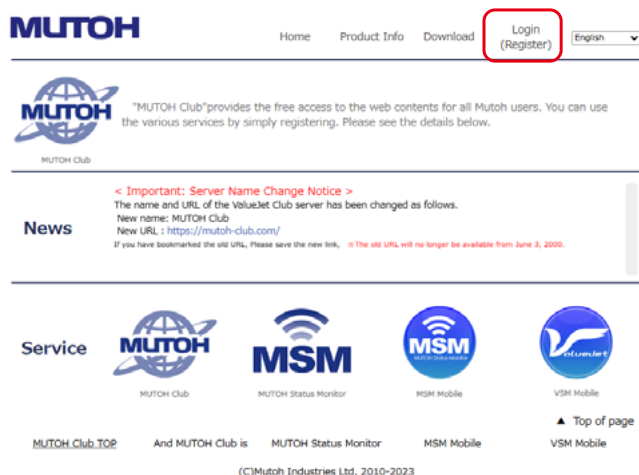

- 3 On the next screen, click [New Registration] and follow the on-screen instruction to complete user registration. Once completed, go to the download page.

 **Important !**

The activation code displayed during registration is required the first time you start this machine.  
(It will also be sent to your registered email address)

- 4 Download the zip file for this product.


 **Note**

For the download and installation methods of VerteLith, see the VerteLith Installation Guide supplied with VerteLith.

# Setup

## Setup Flow


- 1
  - Unzip the file downloaded to any location.
  - Open the folder and double click the setup.exe.
- 2 The all-in-one installer starts and begins the setup wizard.
  - Follow the wizard instructions and complete the printer setup. Here is the setup flow.

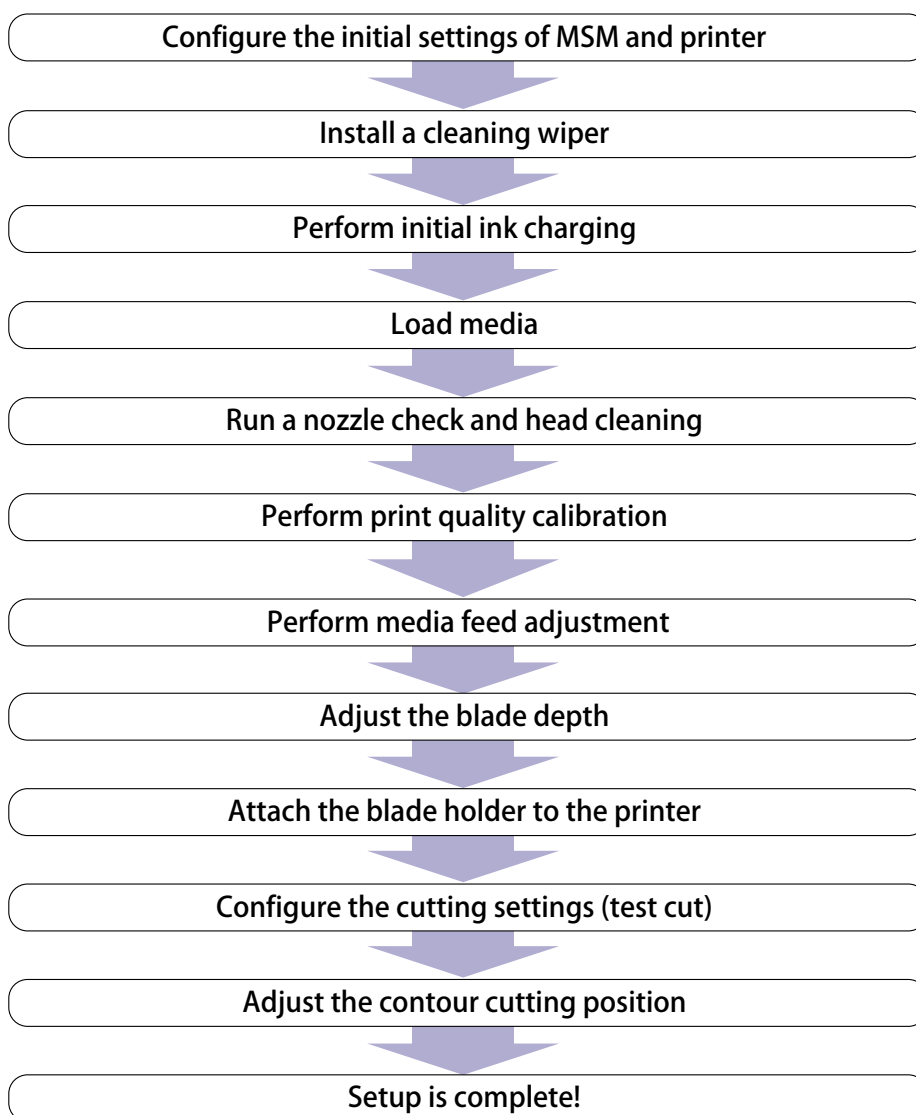

# Configure initial setup of VerteLith and machine

You will need to configure the settings of printer, cutter and various print condition before outputting through VerteLith.


- 1 Start VerteLith and click [Add Printer].

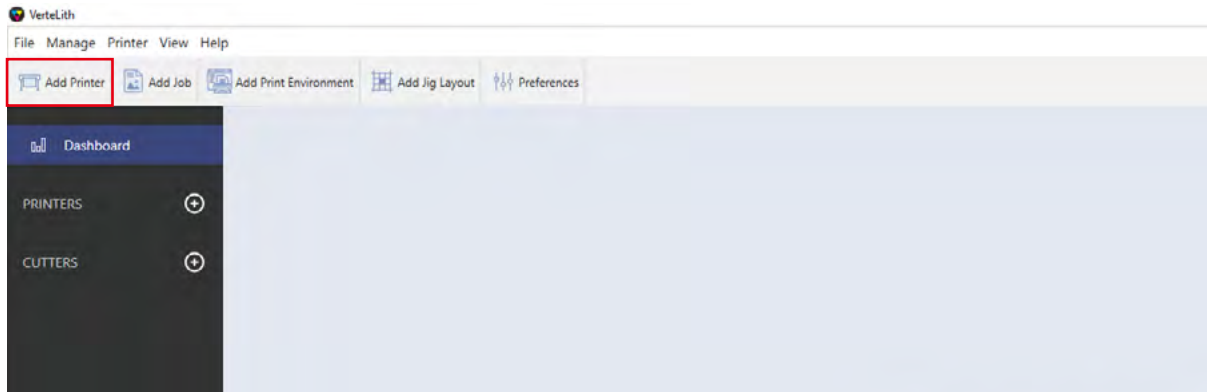


- 2 Configure access settings for MUTOH Club.  
Enter your user ID (e-mail address) and password, then click [Next].



- 3 Enter the VerteLith serial number and authorization code, then click [Next].

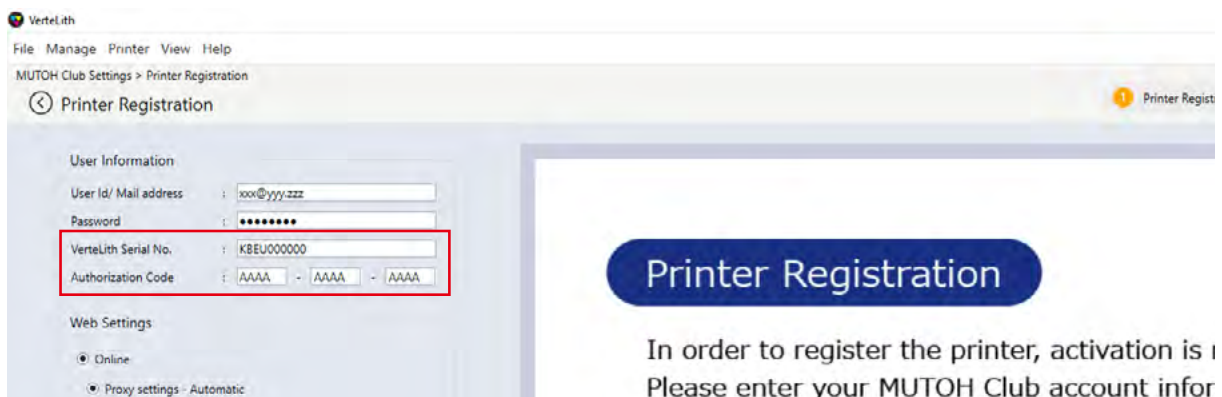


#### 4 Select "Select from the printers on the network" and then click [Find Printer].

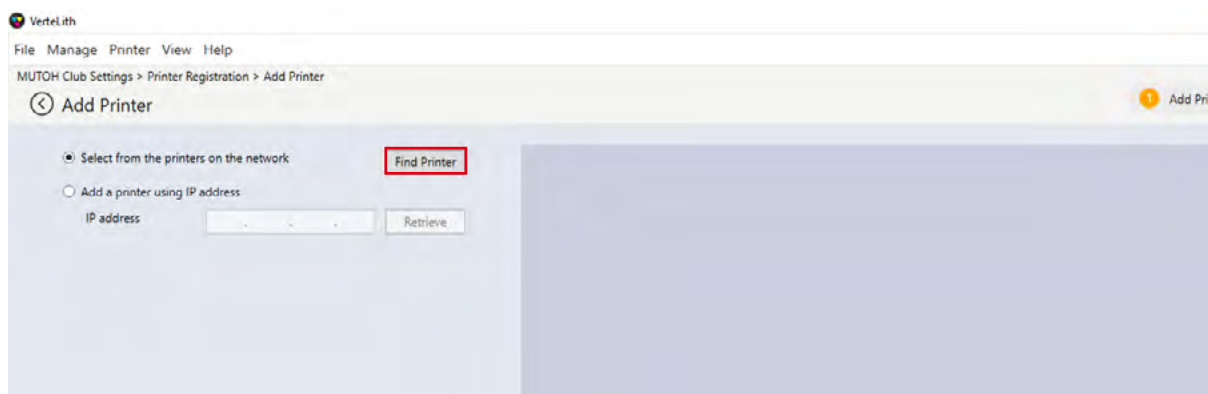

#### Important !

- Make sure that
  - the machine is connected to the network.
  - the machine is turned on.
- If the computer and this machine are connected on a different network, select "Add a printer using IP Address", enter the IP address of the printer, and click [Retrieve].


#### 5 Select the machine you want to add and click [Next].

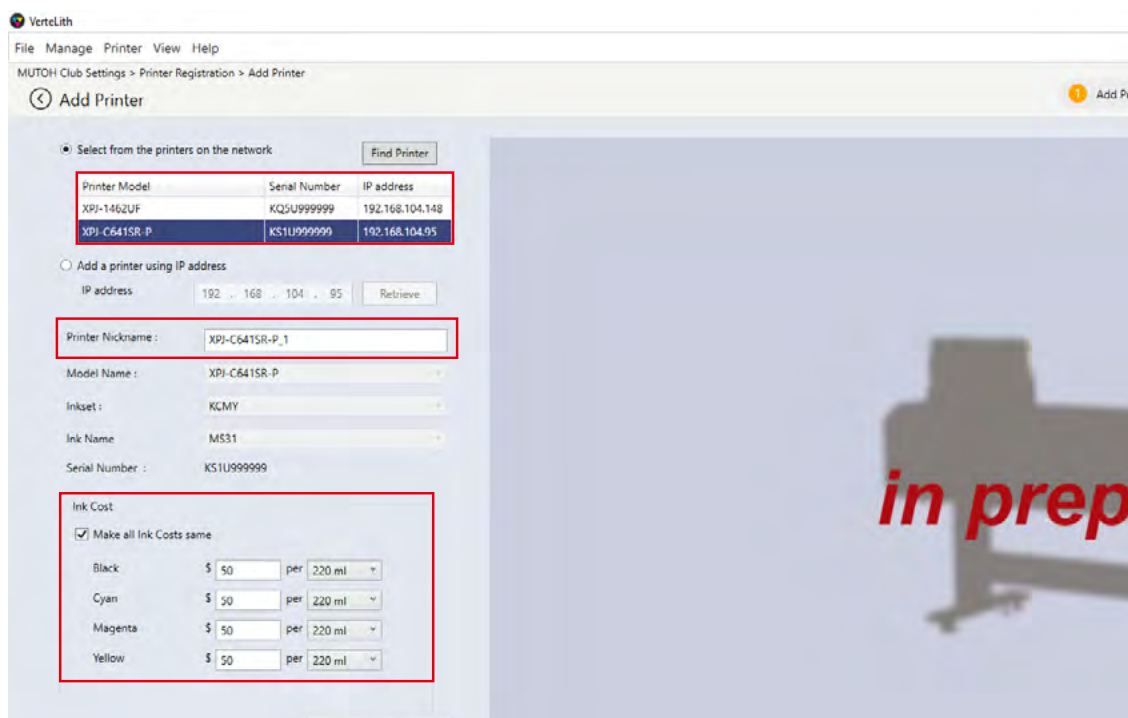


#### Note

You can change the name of the machine.  
By entering the unit cost of ink cartridges, the ink cost can be calculated.  
Both can be set up later.

## 6 Enter a name of the print environment and click [Next].

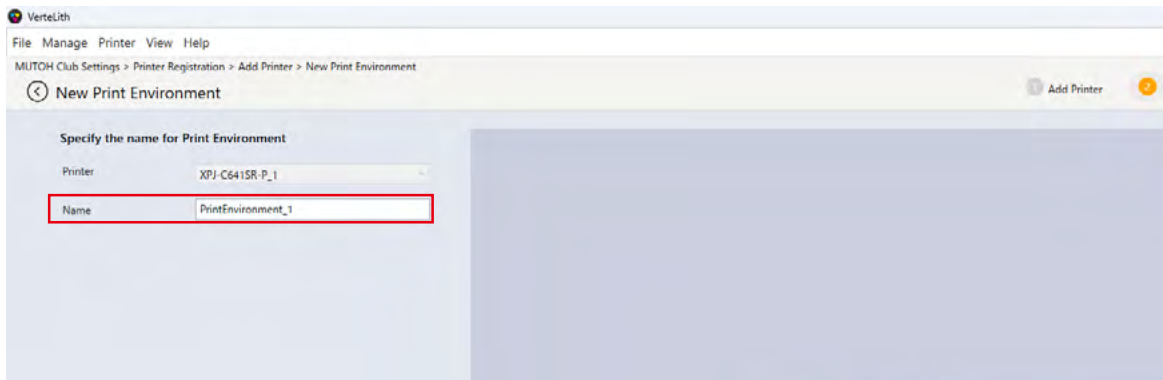

## 7 Specify the location of the hot folder. To change, click [Browse] to specify.

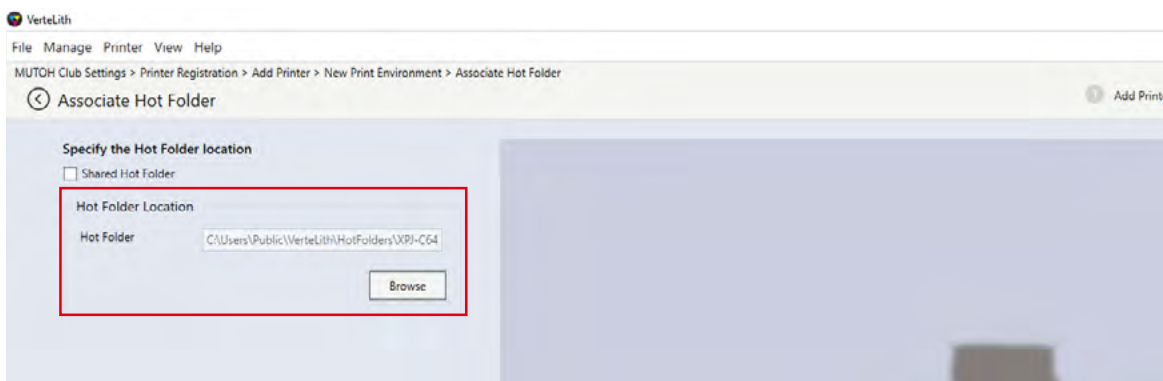

### Important !

A hot folder is the folder that runs automatic processing on jobs.


The hot folder has two subfolders:

- Hold: You can add a job to VerteLith by copying or dragging the job to this folder.
- Print: You can print a job directly according to the print settings specified in the print environment by copying or dragging the job to this folder.

8

Specify the standard print settings for the print environment and click [Next].

- To edit the print settings, click [Edit].

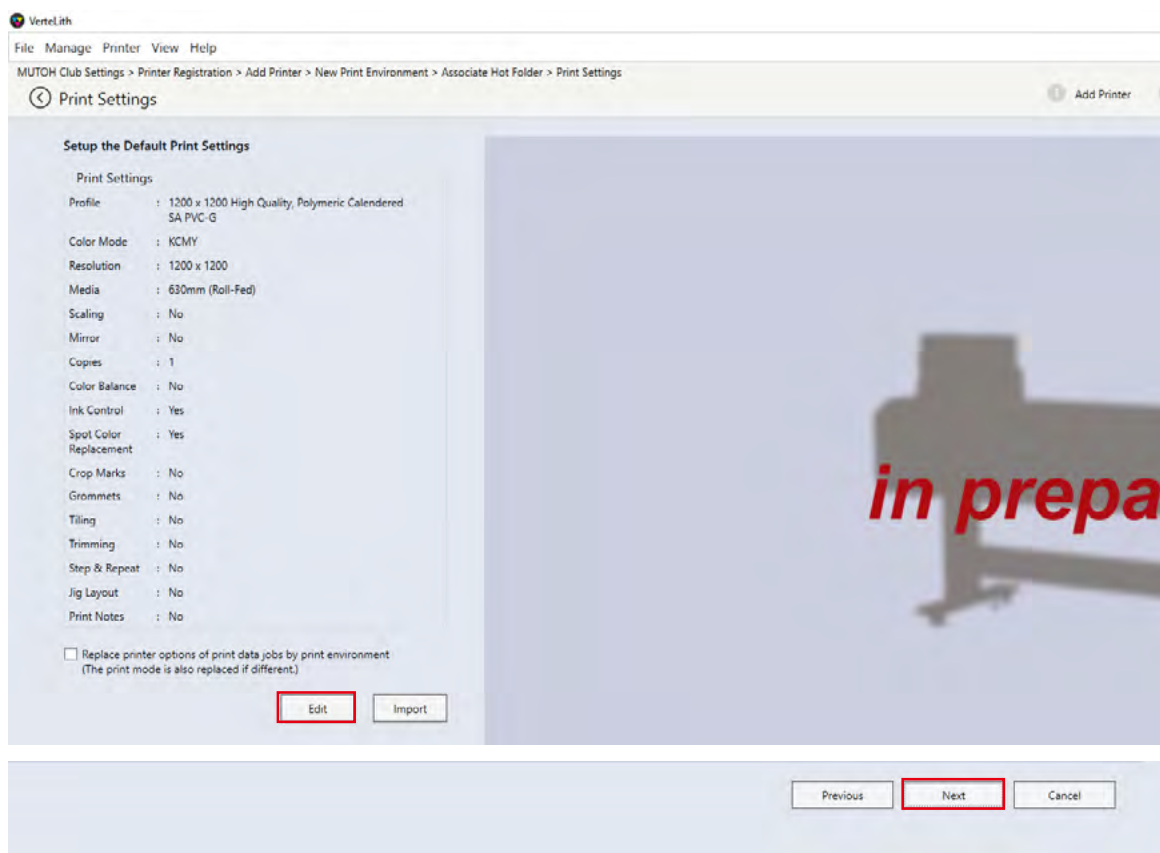


### Important !

These settings will be the default for a job added to the print environment.



9

If needed, select the “Allow Auto Nesting” checkbox and click [Next].

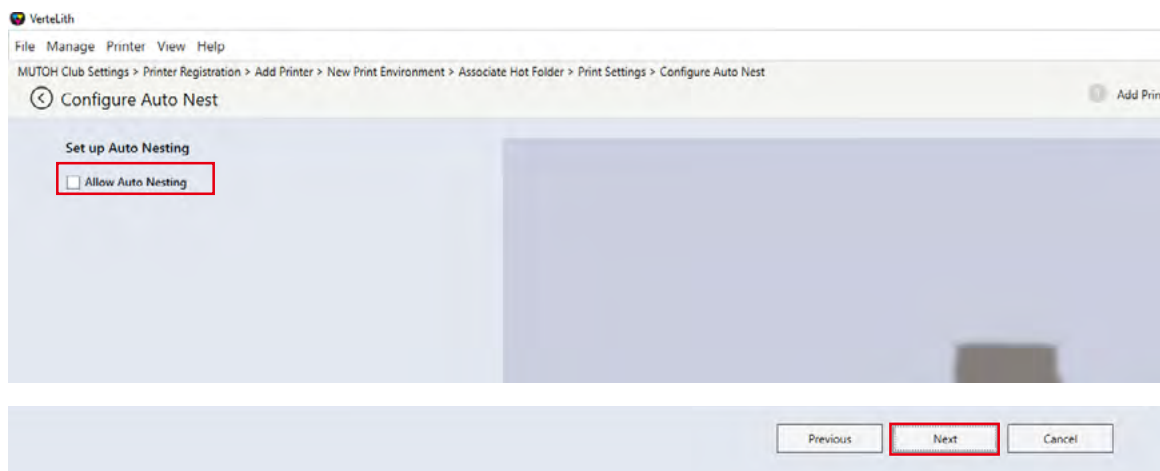

### Important !

By enabling auto nesting, jobs added to the print environment will be automatically nested with the specified conditions.

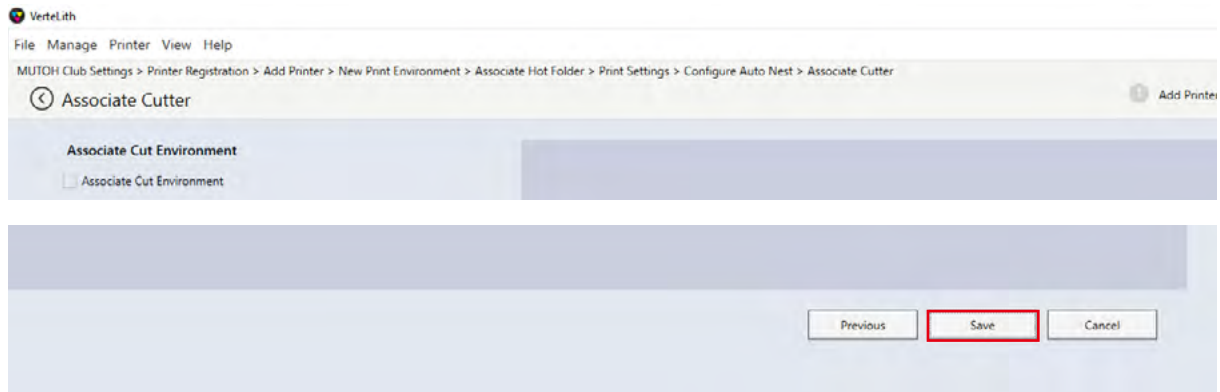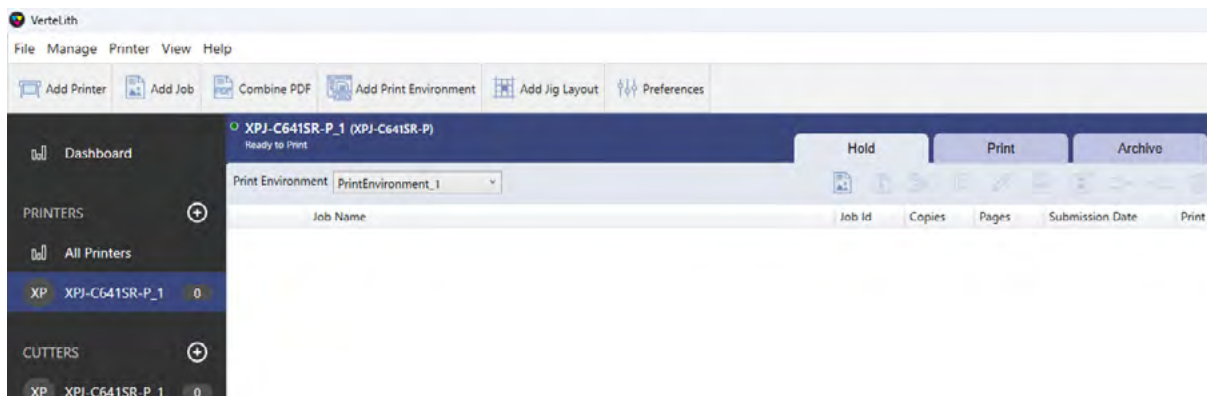**10** Click [Save].**11** The settings required for printing and cutting are now saved.

**MUTOH**

## Czyszczenie, Konserwacja, Wymiana części eksploatacyjnych. Wymagania ogólne.

Niezależnie od informacji i zaleceń zawartych w powyższej instrukcji należy czyścić dane części (jeśli urządzenie je posiada) nie rzadziej, niż w podanej poniżej częstotliwości.

Ponadto należy codziennie przeprowadzać kontrolę zabrudzenia poszczególnych części i przeprowadzać ich czyszczenie jeśli ulegną zabrudzeniu.

Czyszczenie należy wykonywać specjalnymi płynami.

Niezależnie od zaleceń powyższej instrukcji dotyczących częstotliwości czyszczenia lub wymiany poszczególnych elementów urządzenia, należy pamiętać, że druk na różnych podłożach oraz w różnych warunkach pracy może powodować potrzebę częstszego przeprowadzania czyszczenia, konserwacji lub wymiany części eksploatacyjnych. Należy zwracać szczególną uwagę na ogólny stan panujący w pomieszczeniu (temperatura i wilgotność) oraz jakość materiałów używanych w pracy z urządzeniem.

| Nazwa części*                                                                             | Częstotliwość czyszczenia        | Uwagi                                                                   |
|-------------------------------------------------------------------------------------------|----------------------------------|-------------------------------------------------------------------------|
| Głowica                                                                                   | Codziennie, po każdym dniu pracy | bez dotykania lustra głowicy podczas czyszczenia, specjalnym narzędziem |
| Wycieraczka                                                                               | Codziennie, po każdym dniu pracy | specjalnym narzędziem                                                   |
| Uszczelka gumowa i kołnierz (ramka) wokół głowicy                                         | Codziennie, po każdym dniu pracy | specjalnym narzędziem                                                   |
| Materiał, wkład absorpcyjny (gąbka, ciasteczko) - w stacji serwisowej (spluwacze, płucze) | Codziennie, po każdym dniu pracy |                                                                         |
| Opróżnić zbiornik na zużyty atrament                                                      | Raz w tygodniu                   | lub częściej - opróżnić gdy jest pełny                                  |
| Nóż odcinający (odcinacz)-                                                                | Raz w tygodniu                   | sprawdzić stan techniczny                                               |
| Rolki dociskowe                                                                           | Raz w tygodniu                   | czyszczenie środkiem bez silikonu                                       |
| Rurki odprowadzające atrament                                                             | Raz w tygodniu                   | wizualnie i manualnie czy nie są zatkane                                |
| Urządzenie wewnątrz wraz z obudową                                                        | Raz w tygodniu                   |                                                                         |
| Encoder                                                                                   | Raz w miesiącu                   | TYLKO ALKOHOL IZOPROPYLOWY LUB IPA, NA WYŁĄCZONYM PLOTERZE.             |
| Czujniki optyczne                                                                         | Raz w miesiącu                   | NA SUCHO LUB ZA POMOCĄ IPA. NA WYŁĄCZONYM PLOTERZE.                     |
| Lampa UV                                                                                  | Raz w miesiącu                   | specjalnym narzędziem                                                   |
| Pas transmisyjny                                                                          | Raz w miesiącu                   | specjalnym płynem                                                       |

Niektóre części wymagają okresowej wymiany.

Niezależnie od informacji i zaleceń zawartych w powyższej instrukcji należy wymieniać części eksploatacyjne (jeśli urządzenie je posiada) nie rzadziej niż w podanej poniżej częstotliwości.

Uwaga. Wymianę niektórych części winien przeprowadzić autoryzowany serwis (sprawdź kartę gwarancyjną lub instrukcję obsługi).

| Nazwa części*                                                                  | Częstotliwość wymiany                        | Wymienia                                                             |
|--------------------------------------------------------------------------------|----------------------------------------------|----------------------------------------------------------------------|
| Materiał, wkład absorpcyjny (gąbka) ciasteczko w stacji serwisowej (spluwacze) | Co miesiąc                                   | Użytkownik                                                           |
| Wycieraczka                                                                    | Co 3 miesiące                                | Użytkownik lub Autoryzowany serwis gdy wycieraczka jest niewymienna. |
| Filtry (dampery)                                                               | Co 6 miesięcy - wcześniej w razie potrzeby   | Autoryzowany serwis                                                  |
| Stacja serwisowa                                                               | Co 6 miesięcy – wcześniej w razie potrzeby   | Autoryzowany serwis                                                  |
| Nóż odcinający (odcinacz)                                                      | Co 1 rok lub po stępieniu                    | Użytkownik                                                           |
| Pompy                                                                          | Co 1 rok lub po zużyciu                      | Autoryzowany serwis                                                  |
| Lampa UV                                                                       | Co 1 do 2 lat lub po zakończeniu czasu pracy | Autoryzowany serwis                                                  |
| Głowica                                                                        | Co 1 do 2 lat lub po zakończeniu czasu pracy | Autoryzowany serwis                                                  |

Każde urządzenie winno wykonywać nie mniej niż 10m<sup>2</sup> wydruków dziennie. Jeśli urządzenie nie jest komercyjnie używane, należy zalać głowicę, stację serwisową, rurki oraz filtry płynem czyszczącym.

**Przeglądy urządzenia należy wykonywać w autoryzowanym serwisie nie rzadziej niż co 6 miesięcy.**

*\*wyłącznie w przypadku, gdy występuje w urządzeniu*

**Uwaga:**

**Przy wysokich prędkościach druku lub przy niektórych plikach może występować paskowanie.**